

## DMX Values

### 5 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Strobe	000 ⇔ 010 011 ⇔ 255	No function Strobe, slow to fast
3	Auto Programs	000 ⇔ 015 016 ⇔ 095 096 ⇔ 175 176 ⇔ 255	No function Auto program 1 Auto program 2 Auto program 3
4	Auto Speed	000 ⇔ 255	0–100%
5	Dimmer Speed Mode	000 ⇔ 051 052 ⇔ 101 102 ⇔ 152 153 ⇔ 203 204 ⇔ 255	No function Dimmer speed mode off Dimmer speed mode 1 Dimmer speed mode 2 Dimmer speed mode 3

### 2 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Strobe	000 ⇔ 010 011 ⇔ 255	No function Strobe, slow to fast

### 1 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%