

The Complete Experience.

E F N O T E 5X

Quickstart Guide








EN



# Hello!

## Contents

---

<b>IMPORTANT SAFETY INSTRUCTIONS</b> . . . . .	4
Important Information . . . . .	5
<b>Assembling</b> . . . . .	6
Packing List . . . . .	6
Assembly . . . . .	7
Attaching the Beater Patch . . . . .	9
Tuning the Head Tension . . . . .	9
<b>Connection</b> . . . . .	10
<b>Basic Operation</b> . . . . .	12
Panel Description . . . . .	12
Power On/Off . . . . .	12
Home Screen . . . . .	13
 Volume . . . . .	13
 Inst Info . . . . .	13
 Click (Metronome) . . . . .	13
 Recorder . . . . .	13
 Menu . . . . .	14
Power Menu . . . . .	14
Changing the Instrument . . . . .	15
Adjusting the Pad Levels . . . . .	15
Connecting Your Smart Device with Bluetooth . . . . .	16
Changing the Power Save Setting . . . . .	17
Adjusting the Hi-Hat (Auto Calibration) . . . . .	17
<b>Specifications</b> . . . . .	18
Optional components and consumable parts . . . . .	19
<b>Support</b> . . . . .	19

For the EFNOTE 5X Reference Guide or other latest information, please refer to the EFNOTE 5X website.

[ef-note.com/products/drums/EFNOTE5X/efnote5x.html](http://ef-note.com/products/drums/EFNOTE5X/efnote5x.html)





# IMPORTANT SAFETY INSTRUCTIONS




FAILURE TO OBSERVE THE FOLLOWING SAFETY INSTRUCTIONS MAY RESULT IN FIRE, ELECTRIC SHOCK, INJURY TO PERSONS, OR DAMAGE TO OTHER ITEMS OR PROPERTY.

You must read and follow these instructions, heed all warnings, before using this product. Please keep this guide for future reference.

## About warnings and cautions

 <b>WARNING</b>	Indicates a hazard that could result in death or serious injury
 <b>CAUTION</b>	Indicates a hazard that could result in injury or property damage

## About the symbols

	"Caution": Calls your attention to a point of caution
	"Do not ...": Indicates a prohibited action
	"You must ...": Indicates a required action

### **WARNING**

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture



**Do not use or store in the following locations**

- Locations subject to water or rain
- Moist or humid locations (near a bath or shower, or on a wet floor)
- High temperature locations (in direct sunlight, near heating equipment)
- Locations subject to salt damage
- Excessively dusty locations



**Turn the power off if an abnormality or accident occurs**

In the following situations, immediately turn off the power, disconnect the AC adapter from the AC outlet, and contact your dealer.



- If the AC adapter, power cord, or plug is damaged
- If smoke is emitted or an abnormal odor is noticed
- If liquid or a foreign object enters the product
- If an abnormality or malfunction occurs in the product



**Do not plug or unplug the AC adapter with wet hands**

You risk electric shock.



**Do not drop or subject to strong impact**

Do not drop this product or subject it to strong impact.



**Do not disassemble**

Do not disassemble or modify this product and AC adapter.



**Do not damage the power cord**

Do not excessively bend the power cord or damage it. Do not place heavy objects on top of the power cord. Doing so may damage the power cord, causing fire or electric shock.



**Use the included AC adapter**

Use only the included AC adapter. Use the adapter with the voltage that it specifies.

### **CAUTION**



**Do not place the product in an unstable location**

Doing so may cause the product to overturn, causing personal injury.



**Do not sit or stand on the product, or place heavy objects on it**

Doing so may damage the product. You should also avoid applying excessive force to the buttons, knobs, display, and input/output jacks. Doing so will cause malfunctions.



**Do not use the product at a high volume for an extended time**

Using speakers or headphones at high volume for an extended time will damage your hearing.



**Grasp the power plug when connecting or disconnecting**

When connecting or disconnecting the AC adapter from the product, you must grasp the plug rather than pulling the power cord.



**Disconnect the power plug from the AC outlet during lightning storms or when unused for long periods of time**

Failure to do so may cause electric shock, fire, or malfunction.



**Disconnect all connections before moving the product**

Failure to do so may cause damage to the power cord or cables, or may cause people to trip over the cables.



**Handle the product with care**

Take care that your hands or fingers are not injured by corners, edges or openings of the product.



**Keep small parts out of reach of children**

Keep small parts out of reach of children who might accidentally swallow them.



**Supervise or give guidance when children use this product or children are present around this product**

Always take care that children are not injured with this product.

## Important Information

### Power supply

- A small amount of current flows even when the power is turned off. If you will not be using this product for an extended period of time, you may desire to unplug the AC adapter from the AC outlet.

### Regulatory compliance for radio emission devices

- You should keep turning the Bluetooth off when using the product in a country/region other than where it sold.
- The following actions may violate the law.
  - Disassembling or modifying this product.
  - Removing the certification label on the product.

### Placement

- Do not use this product near other electrical products such as televisions, radios. This product may cause noise in televisions or radios.

### Cleaning

- Use a soft dry cloth to clean the product. Do not use benzene, thinner, detergent, or chemically treated cloth, since these can cause deformation or discoloration.

### Data

- Please be aware that the manufacturer bears no responsibility for any consequences that may arise from damage to or loss of data.
- In some cases, equipment malfunction or incorrect operation can cause the contents of the memory to be lost. Please make a backup of any important data that is in the memory.

### Copyright

- Duplication or reuse of the music and sound data contained in or included with this product without permission from the copyright holder is forbidden (with the exception of copying for personal use as permitted by copyright law).
- Copyright for the content (sound data, phrase data, audio data, image data, computer programs, etc.) contained in or included with this product is the property of Ef-Note Inc. Copyright law forbids you to use the above content without permission of Ef-Note Inc. for any purpose other than personal use.
- The above content that is contained in or included with this product may not be resold, distributed, or published, neither in its existing form nor in any way that resembles it.

### Others

- ASIO is a trademark and software of Steinberg Media Technologies GmbH.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc..
- Company names or product names etc. appearing in this document are the registered trademarks or trademarks of their respective corporate owners.
- EFNOTE is a trademark or registered trademark of Ef-Note Inc.
- All illustrations and screens appearing in this document are for the purpose of explaining operation, and may differ from the actual product or specifications.

\* Ef-Note Inc. cannot be held responsible for damage caused by improper use or modifications to the product, or loss of data.

### For EU countries



Ef-Note Inc. hereby declares that the type of radio equipment EFNOTE 5X (EFD5X-STDSET) complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at : [ef-note.com/compliance](http://ef-note.com/compliance)



This symbol on the product means that used electrical and electronic equipment should not be mixed with general household waste. The correct disposal will help prevent potential negative effects on human health and the environment. For proper treatment, recovery and recycling, please contact your city office, waste disposal servicer or the shop which you purchased the product.

### For the USA

#### WARNING

This product contains a chemical known to the State of California to cause cancer, birth defects or other reproductive harm.

#### FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.


## Assembling

## ■ Packing List

<b>A</b>	Sound Module	1x
<b>B</b>	16" Kick	1x
<b>C</b>	12" Snare with Side-Rim	1x
<b>D</b>	10" Tom	1x
<b>E</b>	12" Floor Tom	1x
<b>F</b>	13" Floor Tom	1x
<b>G</b>	14" Hi-Hat Cymbals	1x
<b>H</b>	16" Standard Cymbal	2x

<b>I</b>	18" Standard Cymbal	1x
<b>J</b>	8" Splash Cymbal	1x
<b>K</b>	Smartphone Tray	1x
<b>L</b>	Floor Tom Leg	6x
<b>M</b>	Splash Mount Set	1x
<b>N</b>	Tom Mount Set	1x
<b>O</b>	Module Mount Set	1x
<b>P</b>	Multi-AX Cable	1x

<b>Q</b>	Multi-B Cable	1x
<b>R</b>	Trigger Cable	4x
<b>S</b>	AC Adapter	1x
<b>T</b>	Beater Patch	1x
<b>U</b>	Splash Cymbal Rod Long (Alternative)	1x
	Tuning Key	1x
	Cable Tie	10x
	Quickstart Guide	1x

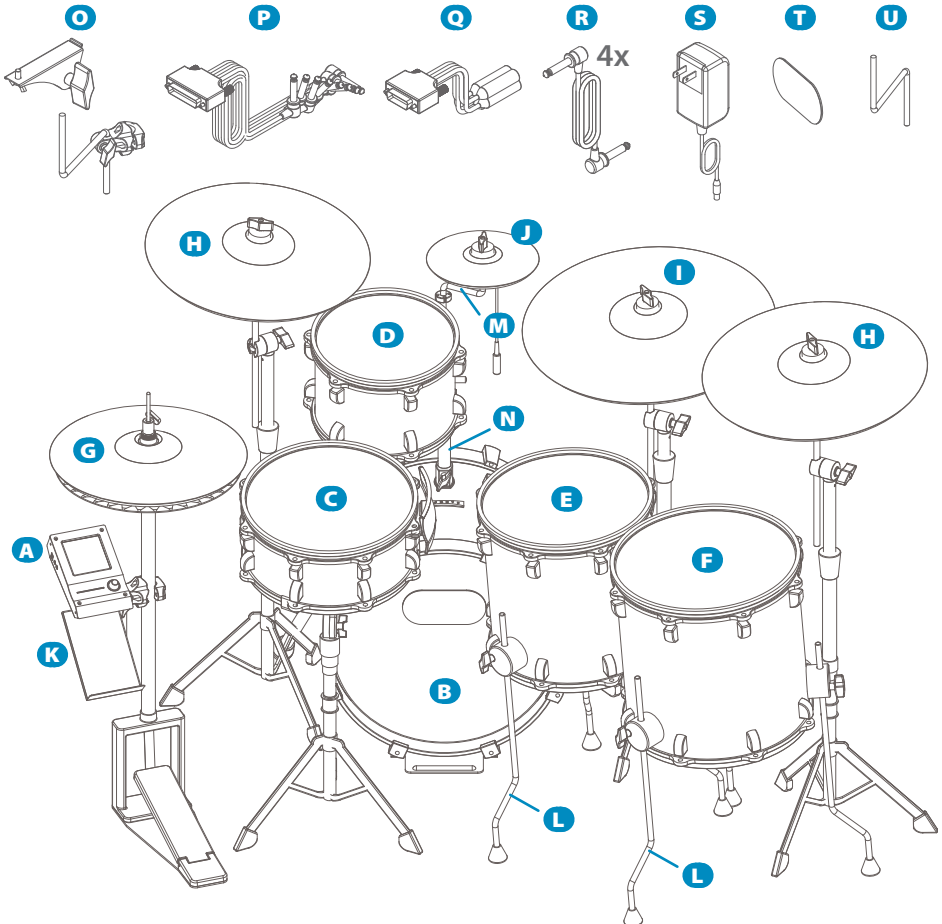


\* Kick pedal and hi-hat stand not included


## ■ Assembly

**CAUTION** Please take your time with assembly and contact us with any questions (p. 19).


1

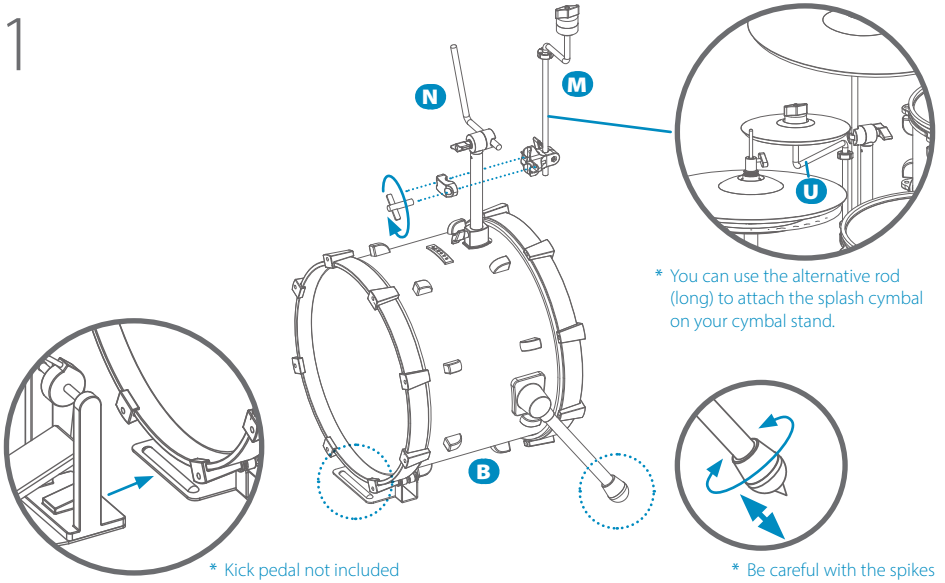


2

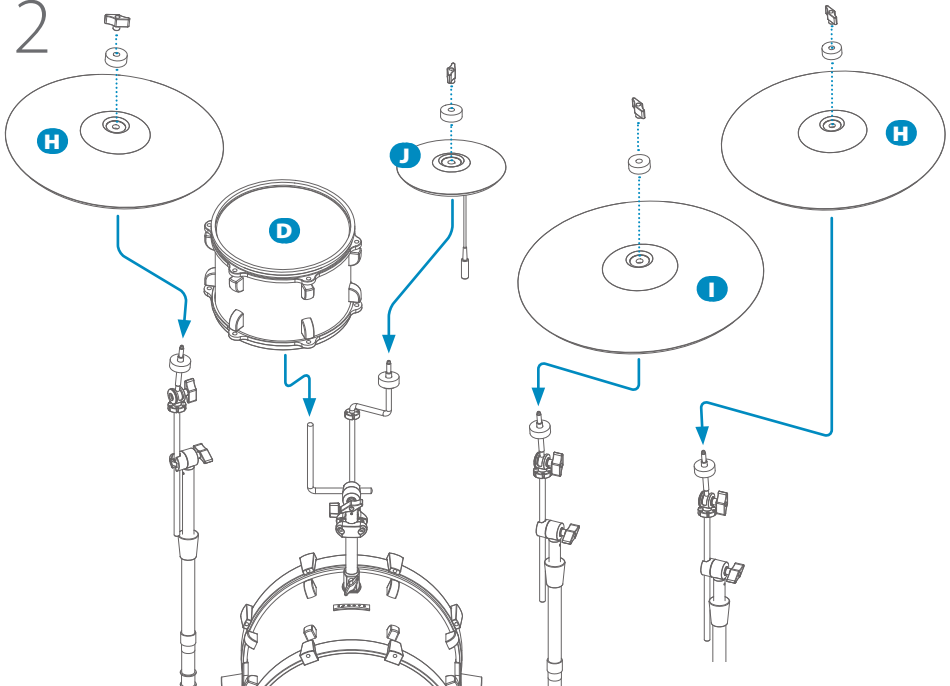


3

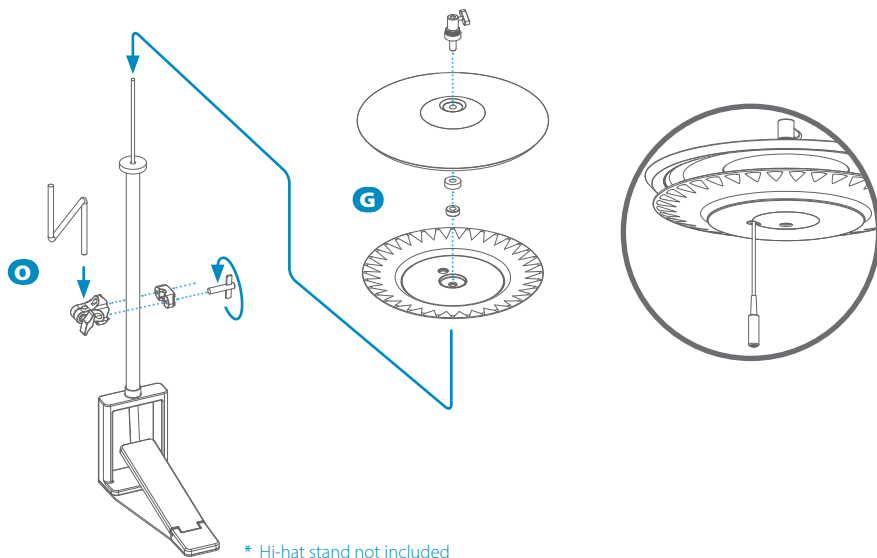 

4

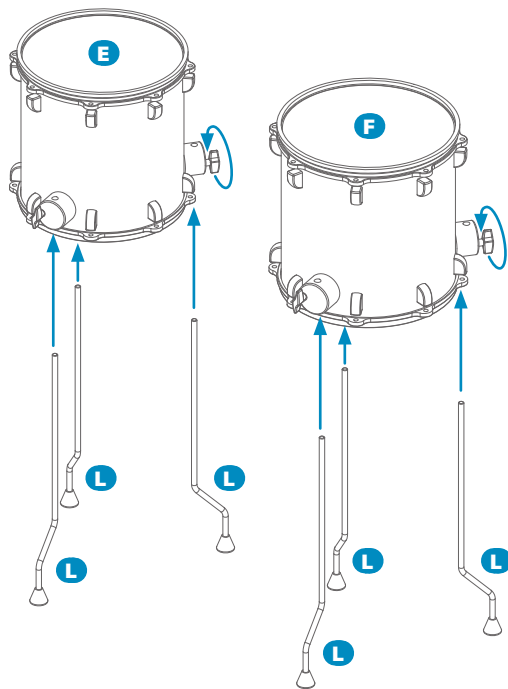


5

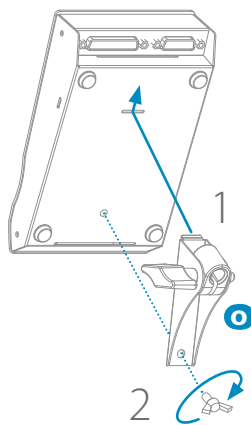



6

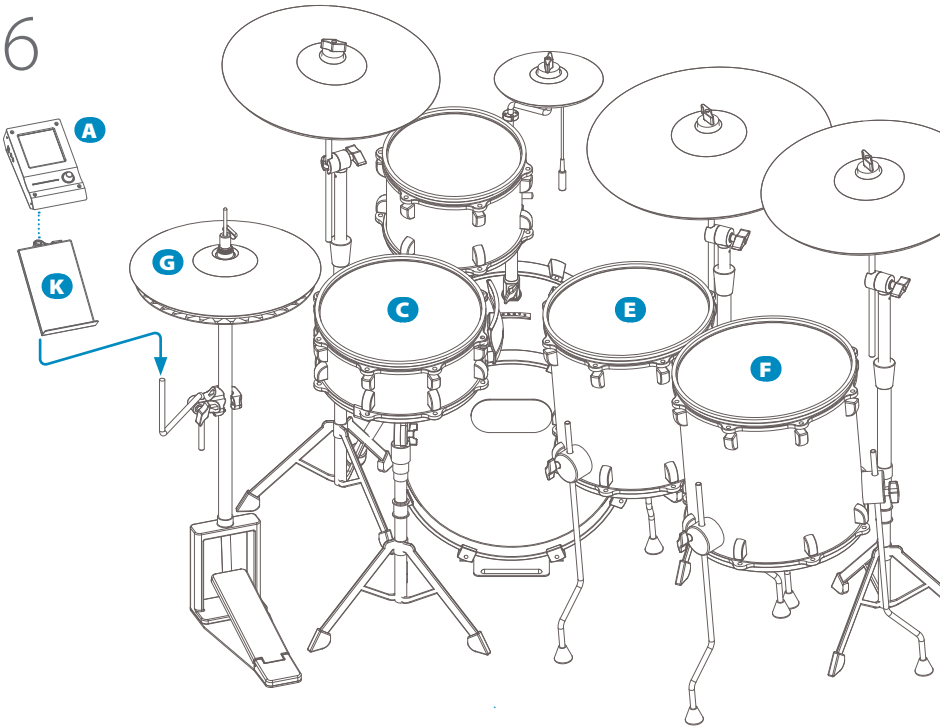


- \* Be sure to tighten all knobs and bolts firmly.
- \* Make sure that all stands are stable.
- \* Be careful that your smartphone does not fall from the smartphone tray.

## ■ Attaching the Beater Patch

Attach the beater patch to where the kick pedal beaters touch on the head of the kick.


- \* Playing without the beater patch may cause damage of the head.
- \* The beater patch is a consumable item. Replace when it has worn.

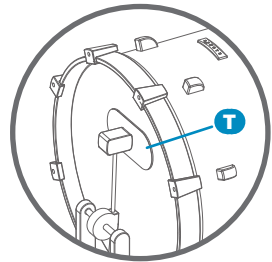




## ■ Tuning the Head Tension

Make sure the mesh drum heads are not too loose. Tighten up the tuning bolts evenly with the tuning key, if needed.


- \* The mesh drum head is a consumable item. Replace when it has worn.

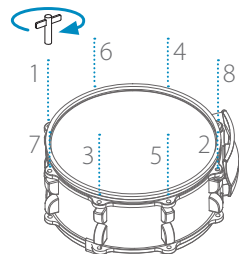

# Connection

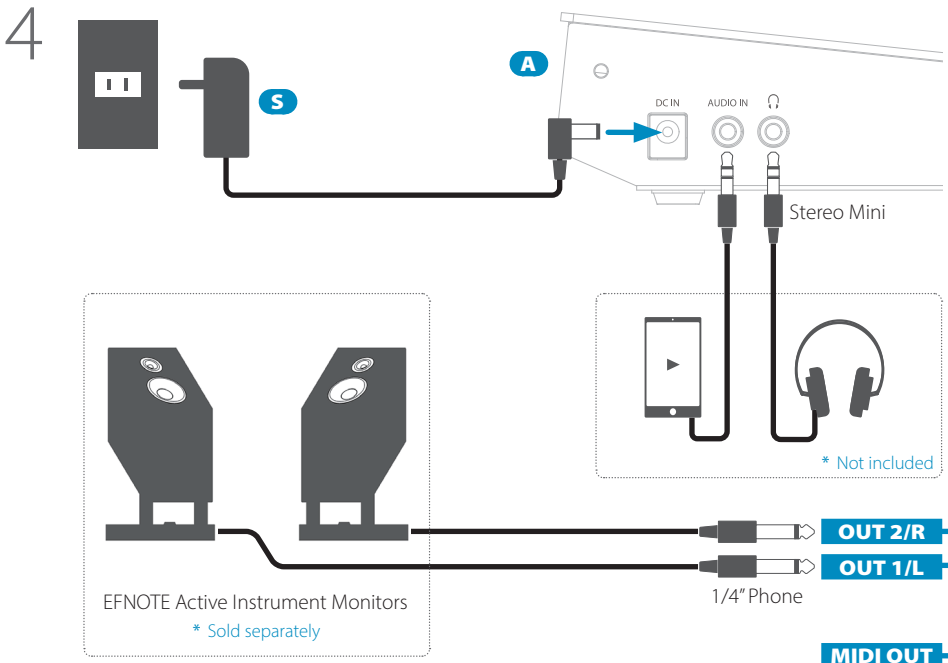
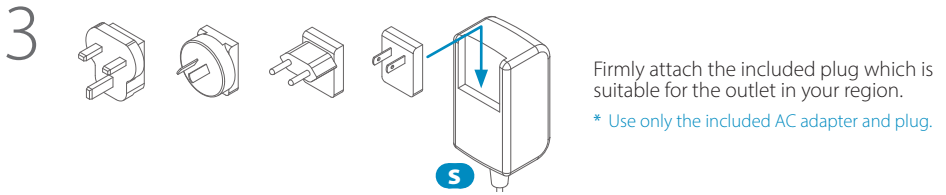
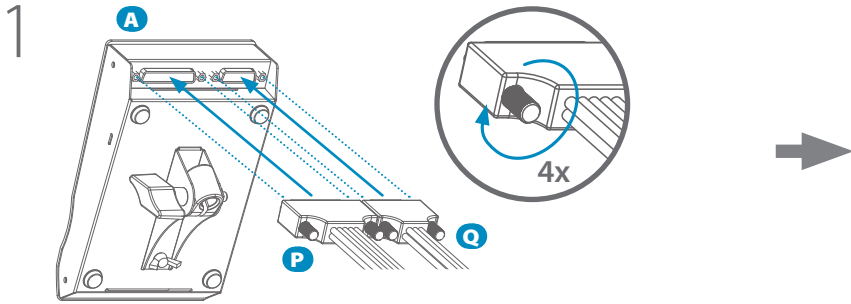


2

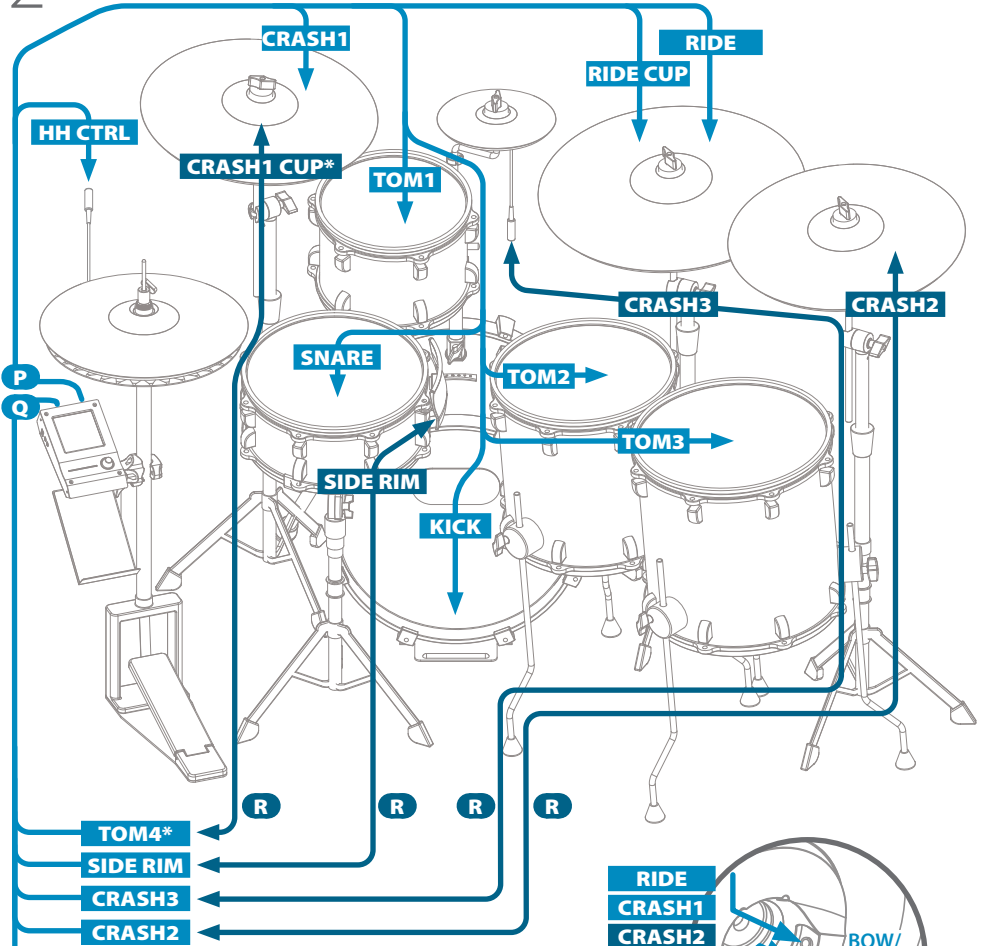


\* The EFNOTE 5X does not include Tom 4 pad in the package.

\* You can use the TOM 4 cable for the Crash 1 Cup.

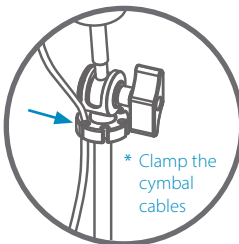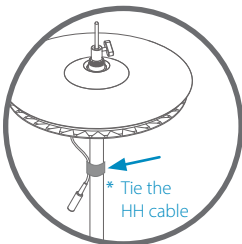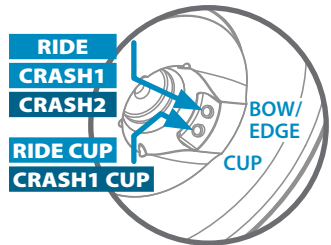


# Basic Operation

## ■ Panel Description

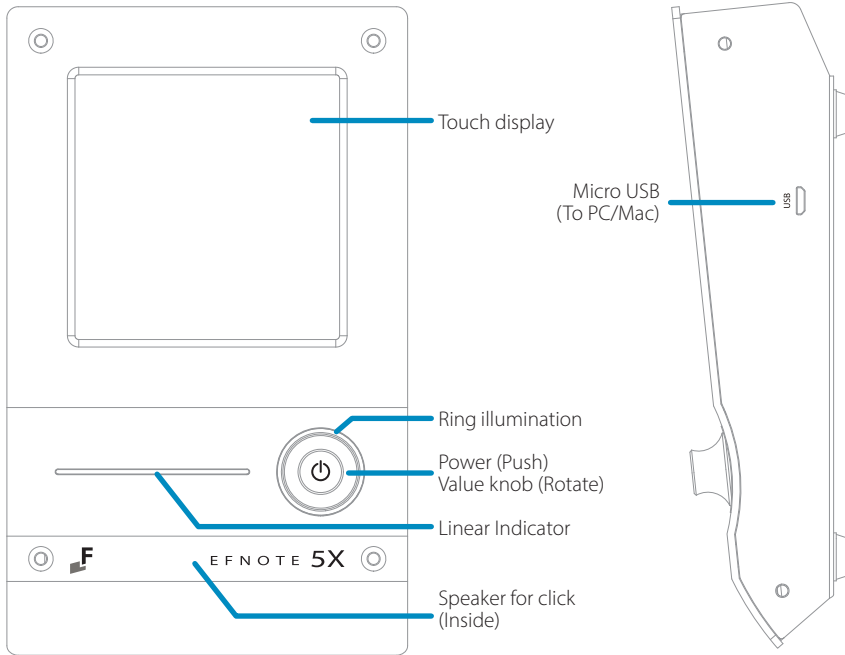


## ■ Power On/Off

### Power On

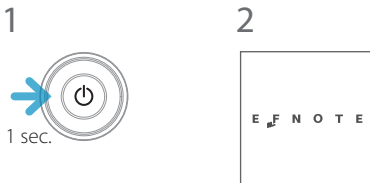

### Power Off

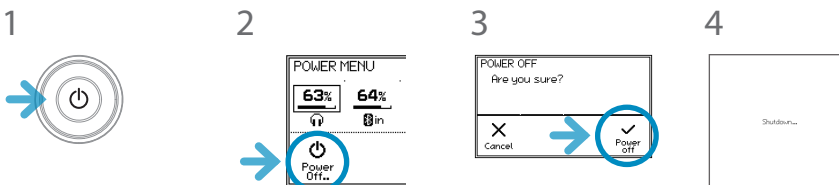

\* Without this procedure may result in loss of changes.

\* The power save function will turn power off automatically after specified period. It can be disabled (p. 17).

## Home Screen

### Switching drum kits

Shows kit list

Previous drum kit

Next drum kit

VOLUME INFO CLICK RECORD MENU

KIT

- 01: STUDIO F
- 02: Neo Classic
- 03: First Note
- 04: Beech
- 05: Unplugged
- 06: Speed Star
- 07: Recording
- 08: Hard Rock
- 09: Compact
- 10: Classic

Cancel Delete Duplicate OK

## Volume

63% 64% 59% 72% X

Phones output level

Bluetooth audio in level

USB audio in level

Analog AUDIO IN level

**CAUTION** Be sure not to listen to audio at a high volume. It can cause permanent hearing loss.

## Inst Info

72% Level DD SHARE Maple S 14x5.5 Instrument X Close

Pad level

Instrument assigned to the pad

\* Clipping may occur when exceeding 85%.

## Click (Metronome)

Tempo (BPM)

Beat (Time signature)

Click level

Activates/deactivates external click speaker

126 4 52% Ext Sp X Close

Tempo Beat Level Ext Sp Close

Turns click on/off

## Recorder

Records your drum performances by MIDI.  
 \* Any other audio sources are not recorded.

2 Track Play Rec Clear X Close

Selects target track

Plays target track

Goes to recording stand-by

Clears target track

### Rec Standby

01-1 Standby Stop Start Auto Rec X Close

Status

Starts recording

Starts when strike

Cancels recording

### Recording

08-1 Recording Stop X Close

Status

Stops recording

### Playing

06-2 Playing Stop FRev FFwd X Close

Status

Stops playing

Fast backward

Fast forward

## Menu



- Kit Edit: Changes instrument on each pad (p. 15)  
Edits drum kit
- Levels: Shows the pad level faders (p. 15)
- Inst Library: Manages your user custom instruments
- Set List: Organizes drum kits for gigs



- Click Setup: Configures click setup
- Stroke Score: Displays your strike points on timeline
- Accuracy Score: Estimates your strike accuracy
- Rhythm Box: Provides basic drum beats



- Volume: Shows the volume control
- Bluetooth: Connects Bluetooth device (p. 16)
- Trigger: Configures triggers (pads)
- Settings: Configures general settings
- Close: Closes menu

For the detailed information about screens can be accessed from the menu, please refer to the "Reference Guide" available on the website below.

[ef-note.com/products/drums/EFNOTE5X/efnote5x.html#downloads](http://ef-note.com/products/drums/EFNOTE5X/efnote5x.html#downloads)



## Power Menu


You can access the power menu anytime.

1



\* Push the knob again to close the menu.

2

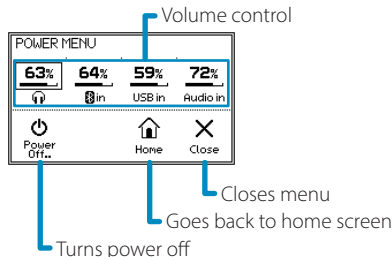


## ■ Changing the Instrument




2 Hit the pad you want to change its instrument.

 3

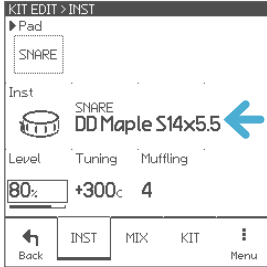

4

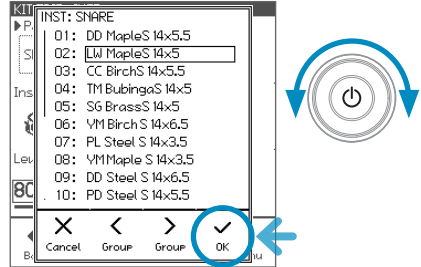 


Changes are saved automatically.

## ■ Adjusting the Pad Levels



 2 Choose a pad.

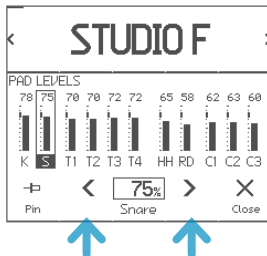

3 Adjust the level.

\* Clipping may occur when exceeding 85%.



\* You can also choose the pad by hitting it.


\* If pinned, the selected pad cannot be changed by hit.

Changes are saved automatically.


## ■ Connecting Your Smart Device with Bluetooth

You can connect your smart device to the EFNOTE 5X to listen to audio with Bluetooth.

### Connecting

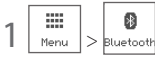


- 2 Make sure the status is "Ready to pair".  
If the status is "OFF", tap it to turn on.

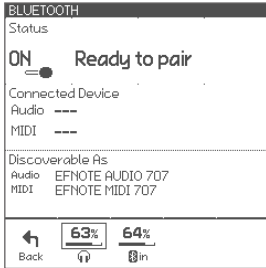

#### On your smart device

- 3 Turn Bluetooth on.
- 4 Find new device discoverable as "EFNOTE AUDIO xxx" (xxx is any value), and select it.
- 5 If pin code is required, enter "0000" (four zeros).
- 6 Tap [Pair].

- 7 Make sure the status changes to "Connected", and your device name is displayed.

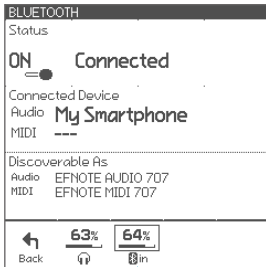

Controls Bluetooth  
input volume

- 8 Now, you can listen to the audio playing on your smart device.

\* Make sure to increase the volume of your smart device.

**CAUTION** Be sure not to listen to audio at a high volume. It can cause permanent hearing loss.

### Disconnecting

- 1 Tap [Disconnect] on your smart device.

### Re-connecting

 
- 1 Tap [Connect] on your smart device.



## ■ Changing the Power Save Setting



2

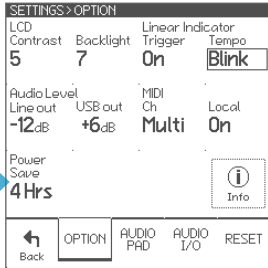


3




When "Off", the module will not turn off automatically.

## ■ Adjusting the Hi-Hat (Auto Calibration)

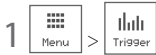


2

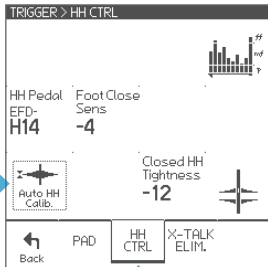 


3

Drop the top hi-hat cymbal.

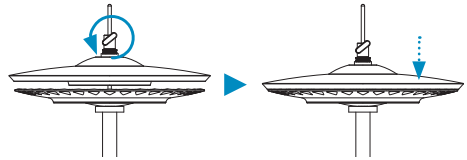


4

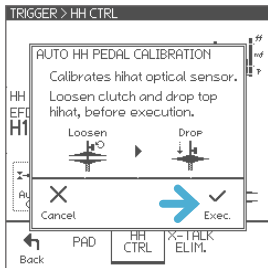 

### Adjusting the hi-hat manually

- When the hi-hat sound is not closed enough despite you press the pedal firmly, increase the "Closed HH Tightness" value.
- When the hi-hat sound is not open easily even if you slightly release the pedal, decrease the value.
- The default setting is "0".

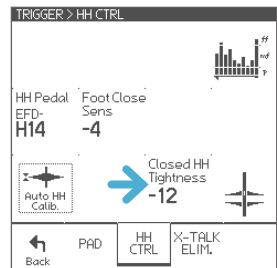

# Specifications

## Electronic Drum Kit: EFNOTE 5X

Sound Module: EFD-5X

Item	Specifications
Trigger Interface	<ul style="list-style-type: none"> <li>• 3-Zone: Snare, Crash 1/2*, Ride</li> <li>• 2-Zone: Tom 1/2/3/4, HH, Crash 3</li> <li>• 1-Zone: Kick</li> </ul> <p>* Crash 1 and Crash 2 inputs support 3-zone triggering with using TOM 4/CRASH 3 cables. * Tom 4 pad is not included.</p>
Audio / MIDI Interface	<ul style="list-style-type: none"> <li>• Line (1/2) Output: 2x 1/4"TS Phone (+4dBu, Unbalanced)</li> <li>• Phones (3/4) Output: Stereo Mini-Phone (320 mW + 320 mW @32Ω)</li> <li>• Audio Input: Stereo Mini-Phone (+2dBu Max)</li> <li>• USB: Audio 8-ch Output / 2-ch Input (Mac/Windows ASIO, USB 2.0 Hi-Speed), MIDI In/Out</li> <li>• Bluetooth: Audio Input (A2DP), MIDI In/Out (Bluetooth Low Energy/GATT)</li> </ul> <p>Transmission Frequency: 2402--2480 MHz, Maximum Transmit Power: 2.5 mW EIRP</p> <ul style="list-style-type: none"> <li>• MIDI Out: 5-pin DIN</li> </ul>
Recorder	<ul style="list-style-type: none"> <li>• Resolution: 480 TPQN</li> <li>• Tracks: 15</li> <li>• Capacity: Approx. 8,000 Events/Track</li> </ul>
Power supply	DC 12V, 500 mA (Nominal) / 800 mA (Max)
Dimensions / Weight	172 (W) x 106 (D) x 47 (H) mm / 700 g * Excluding protrusions

Pads and accessories:

Item	Specifications
Kick (EFD-K1612)	<ul style="list-style-type: none"> <li>• Size: 16 x 12"</li> <li>• Zone: Head</li> <li>• Sensor: Multi</li> <li>• Connector: Head (1/4"TRS Phone)</li> </ul>
Snare (EFD-S1250)	<ul style="list-style-type: none"> <li>• Size: 12 x 5"</li> <li>• Zone: Head / Rim / Side-Rim</li> <li>• Sensor: Multi</li> <li>• Connector: Head/Rim, Side-Rim (2x 1/4"TRS Phone)</li> </ul>
Tom (EFD-T1070) Floor Tom (EFD-T1212) Floor Tom (EFD-T1313)	<ul style="list-style-type: none"> <li>• Size: 10 x 7" (Tom), 12 x 12", 13 x 13" (Floor Tom)</li> <li>• Zone: Head / Rim</li> <li>• Sensor: Multi</li> <li>• Connector: Head/Rim (1/4"TRS Phone)</li> </ul>
Hi-Hat (EFD-H14)	<ul style="list-style-type: none"> <li>• Size: 14" (Top/Bottom)</li> <li>• Zone: Bow / Edge / Cup</li> <li>• Pad Sensor: Multi (360° flat sensing + choke)</li> <li>• Motion Sensor: Optical</li> <li>• Connector: 6-pin</li> </ul> <p>* EFNOTE 5X sound module does not support hi-hat cup zone.</p>
Crash (EFD-C16) Ride (EFD-C18)	<ul style="list-style-type: none"> <li>• Size: 16" (Crash), 18" (Ride)</li> <li>• Zone: Bow / Edge / Cup</li> <li>• Sensor: Multi (360° flat sensing + choke)</li> <li>• Connector: Bow/Edge, Cup (2x 1/4"TRS Phone)</li> </ul>
Splash (EFD-C08)	<ul style="list-style-type: none"> <li>• Size: 8"</li> <li>• Zone: Bow / Edge</li> <li>• Sensor: Multi (360° flat sensing + choke)</li> <li>• Connector: Bow/Edge (1/4"TRS Phone)</li> </ul>
Accessories	<p>Brake-Out Cable (EFD-MULTI-AX), Brake-Out Cable (EFD-MULTI-B), 4x Trigger Cable 3.0 m (EFD-TRS-LL3), Splash Mount, Tom Mount, Module Mount, Splash Cymbal Rod (Long), Beater Patch, Smartphone Tray, AC Adapter, Cable Ties, Tuning Key, Quickstart Guide</p> <p>* Kick pedal, hi-hat stand, cymbal stand, snare stand, and drum throne are not included.</p>

\* Specification and design are subject to change without prior notice.

## ■ Optional components and consumable parts

Option	Item	Description
Adding a 2nd tom	EFD-T1180-BO	Rack Tom 11" (Black Oak) * Using the TOM 4 cable.
	EFD-TM5	Tom Mount
Upsizing the ride cymbal + Adding a 4th crash cymbal	EFD-C20	Ride Cymbal 20" * Replacing the ride cymbal with the new 20", and using the 18" with TOM 4 cable. * In this case, you need to change instrument assigns for the Tom 4 pad.
	EFD-CS5	Cymbal Stand
Replacing the drum head	EFD-MDH10	Mesh Drum Head 10"
	EFD-MDH12	Mesh Drum Head 12"
	EFD-MDH13	Mesh Drum Head 13"
	EFD-MDH16	Mesh Drum Head 16"
Replacing the beater patch	EFD-KBP2	Kick Beater Patch

\* When any optional pad is added, configure the Assign and Pad model in the Trigger screen. See the Reference Guide for the detail.

\* Note that multiple options which use same cable cannot be applied.

## Support

Please contact us with questions and comments, we love to hear from you.

**Artesia Pro Inc.**

✉ [info@artesia-pro.com](mailto:info@artesia-pro.com)

🌐 [artesia-pro.com](http://artesia-pro.com)



**E F N O T E**

**ef-note.com**