



Quick Set-Up Instructions

CP Beam™ Antenna
UHF Wireless 470-698 MHz



1. Mount the CP Beam™ Antenna to a stand.

2. Connect coax and aim the antenna toward the stage. An N to BNC adapter is provided (one included in package).

3. Press the CP Beam™ Antenna closed and buckle straps to store or transport.

- This product is designed to fit many different stand types, 1/4-20, 3/8-16, or 5/8-27.
- Use good quality coax.
- Removal of cover will void warranty.