

# MiniMega Assembly Instructions

Tools needed: rubbing alcohol, rubber mallet, and tall assistant

Minimega Checklist:

- (1) A2466x6, (1) A2466x5, (1)AX2412x6, (1)AX2412x5, (25) S2224
- (1) S2466, (1) S1266, (2) ST2466, (1) Fan
- (12) Sections of H-Channel
- (1) Section of Base Channel
- (2) Support Bars

1. Inspect shipping cartons. If damaged is suspected, take pictures of damaged boxes.
2. Open all boxes and check for damage. Call your ClearSonic dealer immediately if you have any damaged or missing items.
3. Stand up the main 5.5' tall panel shield systems in zigzag formation with the base channel on the bottom.



4. Peel masking off panels. (**Once masking is removed panels can not be returned. Test your MegaPac with masking first if you are not sure.**) Using gloves to handle acrylic panels will help keep them free of finger prints during assembly.

5. Install H-channels on top of 5.5' tall shields. Outside edge of H-channel should line up with outside edge of shield below. Lubricate the top of the panels with rubbing alcohol (or other quick-drying alcohol solution) to aid installation.



6. Note the number of panels and hinge configuration of each shield system. Be sure the number of panels matches and that everything will fold correctly once installed. Have your assistant “feed” the folded AX panels one at a time while you place them into position atop the larger shields. Make sure the edges line up. Don’t seat the AX panels completely until all are in place. Tap the top of AX panels with a rubber mallet to seat completely into H-channel on both panel systems.



7. Fold up the larger of the two panel systems and “walk” it to the front center of the drum kit or whatever you’re isolating.




8. With one person on each side, unfold the system and wrap it around the kit.




9. Use your fingers to lift the panels at the bottom cable cut-outs to pull or push system into final position. End panels should be parallel and symmetrical on either side of the kit, about 7 feet apart for most applications.



10. Wrap the smaller panel system around the back so it meets with front panels on both sides.

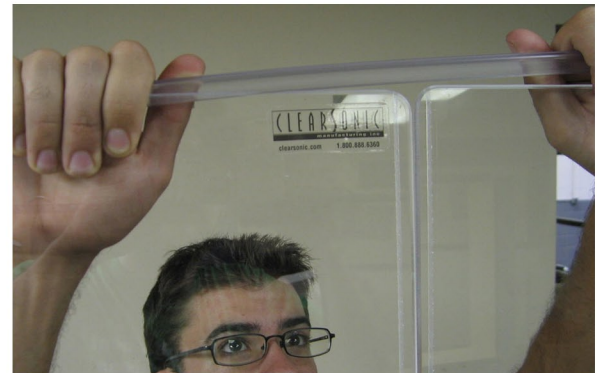

11. Next, use the extra base channel included with your MegaPac to connect the front panels with the rear panels on the side opposite the door. Line up the end panels of both shields, and attach the base channel to the top of the AX extenders.

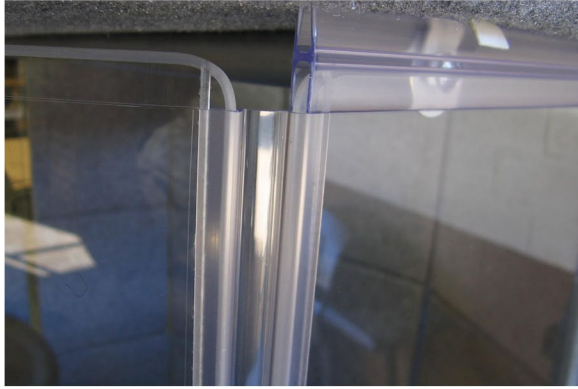

12. The extra 'H' channel provided with your MegaPac will help keep the lid from obstructing the door panel when entering and exiting. Place this on top of the AX panel next to your door.



13. Adjust both Lid support bars to the width of the front panels. Rest one support bar on top with the J-hooks at least 4-inches from the edge of the end panels. Place the other bar about a foot in front of the first bar. Do not extend the bar beyond the red limit mark.



14. Lay the rectangular 2' wide S2466 on top (about six inches from the center of the front panels) with at least a one inch over-hang in front. The Lid sections will rest on the support bars in back. Place the 1' wide S1266 right next to it with same over-hang. Complete the lid by placing the ST2466 trapezoid sections on each side. You may have to make adjustments to the panels and/or lid in order to achieve maximum coverage.



15. Place Velcro on all four corners of the S2224 and S2216 baffles about 1-inch from the edge. Peel off the paper to expose the adhesive.

16. Place the S2224 and S2216 baffles in position on the shields. When attaching SORBER baffles to your door panel, raise the bottom S2224 approximately  $\frac{1}{2}$  inch off the ground so it does not drag. It works best to have an assistant apply pressure from the opposite side while pressing on the baffle corners to make sure the Velcro sticks securely.

17. Clip the fan to the back of the S2466 or on one of the support bars to aid in air exchange.


18. Enjoy your MiniMega!



Thank you for choosing ClearSonic. Please contact us if you have any questions or concerns about MegaPac assembly or operation: 800-888-6360 or [info@clearsonic.com](mailto:info@clearsonic.com)

# S2224 Baffle Placement for MiniMega

Front A2466x6

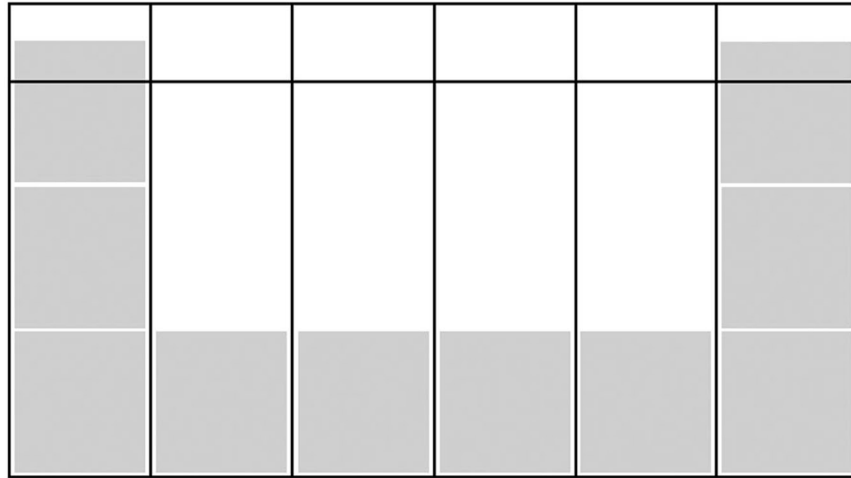

Rear A2466x5

