CARBONITE

Desk Mounting (Angled Installation)





Panel dimensions are available from the Ross Video website. Dimensions for the brackets are provided here.

Tip: Contact Ross Video Technical Support for CAD drawings of the control panel.



Using the provided screws, install the Mounting Brackets onto the sides of the control panel.

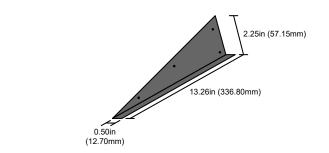

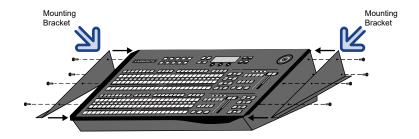




Insert the control panel into the desk cutout.

Ensure there is proper cable clearance at the back of the panel.





Install the Under-Desk Brackets on both sides of the control panel to secure the control panel in the desk.

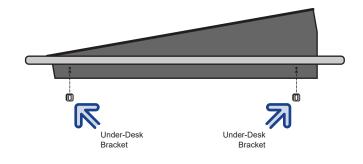



CARBONITE

Desk Mounting (Flat Installation)



Panel dimensions are available from the Ross Video website.


Tip: Contact Ross Video Technical Support for CAD drawings of the control panel.

You may not want to cut out the optional Cable Cutout if you are mounting the control panel flat.



Insert the control panel into the desk cutout.

Ensure there is proper cable clearance at the back of the panel.





Install the Under-Desk Brackets on both sides of the control panel to secure the control panel in the desk.

