


User Manual





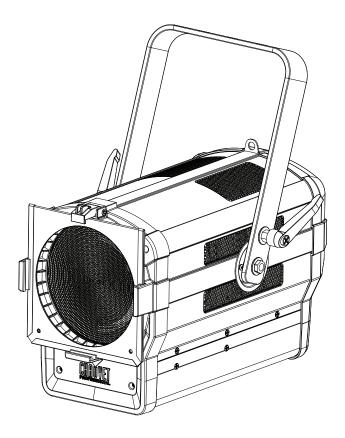

EDITION NOTES

The Ovation F-415VW User Manual includes a description, safety precautions, installation, programming, operation and maintenance instructions for the Ovation F-415VW.

Trademarks

CHAUVET, the Chauvet logo and Ovation F-415VW are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

Copyright Notice

The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

© Copyright 2018 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

Document Printing

For best results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure the printer to scale the content accordingly.

Intended Audience

Any person installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions. Download the latest version from <u>www.chauvetprofessional.com</u>

Document Revision

This Ovation F-415VW User Manual is the 1st edition of this document. Go to <u>www.chauvetprofessional.com</u> for the latest version.



TABLE OF CONTENTS

1.	Before You Begin	3
	What Is Included	3
	Claims	3
	Manual Conventions	3
	Symbols	3
	Safety Notes	4
	Personal Safety	4
	Mounting and Rigging	4
	Power and Wiring	4
	Operation	4
	Expected LED Lifespan	4
2		
۷.	Introduction	5
	Description	5
	Features	5
	Product Overview	6
	Product Dimensions	7
3.	Setup	8
	AC/DC Power	8
	AC Plug	8 8 8
	Power Linking	8
	DMX Linking	9
	DMX Personalities	9
	Remote Device Management (RDM)	9
	Master/Slave Connectivity	9
	Mounting	10
	Orientation	10
	Rigging	10
	Procedure	10
4.	Operation	11
	Control Panel Operation	11
	Control Options	11
	Programming	11
	Menu Map	11
	Configuration (DMX)	
	Control Personalities	
	Starting Address.	
	DMX Values	14
	18 Ch	14
	16 Ch	14
	13 Ch	15
	9 Ch	15
	7 Ch	16
	6 Ch	16
	4 Ch Preset Color Temperature Chart	16 16
		17
	Configuration (Standalone)	17
	Static Mode	17
	Master/Slave	17
	Dimmer Profiles	17
	LED Frequency	17
	Fan Mode	18



Back Light	18
System Information Factory Reset	18
Factory Reset	18
5. Technical Information	19
Product Maintenance	
6. Technical Specifications	20
Photometrics Chart	
Returns	23
Contact Us	



1. BEFORE YOU BEGIN

What Is Included

- Ovation F-415VW
- Neutrik® powerCON® power cord
- Gel Frame (6.25 in/159 mm accessories)
- Quick Reference Guide

Claims

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection. For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Manual Conventions

Convention	Meaning		
1–512	A range of values		
50/60	A set of values of which only one can be chosen		
<set></set>	A button on the product's control panel		
Settings	Settings A product function or a menu option		
.			

Symbols

Symbol	Meaning
<u>A</u>	Electrical warning. Not following these instructions may cause electrical damage to the product, accessories, or the user.
<u> </u>	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
Í	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.

Any reference to power connections in this manual assumes the use of Neutrik® powerCON® cables.



The term "DMX" used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.



Safety Notes

Read all the following safety notes before working with this product. These notes contain important information about the installation, usage, and maintenance of this product.



This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained, certified technicians. Do not open the housing or attempt any repairs.



All applicable local codes and regulations apply to proper installation of this product.

Personal Safety

- Avoid direct eye exposure to the light source while the product is on.
- Always disconnect the product from the power source before cleaning or replacing the fuse.
- Always connect the product to a grounded circuit to avoid the risk of electrocution.
- Do not touch the product's housing when operating because it may be very hot.

Mounting and Rigging

- This product is not intended for permanent installation.
- This product is for indoor use only! To prevent risk of fire or shock, do not expose this product to rain or moisture. (IP20)
- CAUTION: When transferring product from extreme temperature environments, (e.g. cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow product to fully acclimate to the surrounding environment before connecting it to power.
- Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Make sure there are no flammable materials close to this product while it is operating.
- When hanging this product, always secure to a fastening device using a safety cable.
- Never carry the product by the power cord.

Power and Wiring

- Make sure the power cord is not crimped or damaged.
- Always make sure you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.
- Never connect this product to a dimmer pack or rheostat.
- Make sure to replace the fuse with another of the same type and rating.
- Never disconnect this product by pulling or tugging on the power cable.

Operation

- Do not operate this product if there is damage on the housing, lenses, or cables. Have the damaged parts replaced by an authorized technician at once.
- Do not cover the ventilation slots when operating to avoid internal overheating.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate the product at higher temperatures.
- In the event of a serious operation problem, stop using this product immediately!



If your Chauvet product requires service, contact Chauvet Technical Support.

Expected LED Lifespan

LEDs gradually decline in brightness over time, primarily because of heat. LEDs that are arranged in clusters experience higher operating temperatures than single LEDs. For this reason, operating clustered LEDs at their fullest intensity significantly reduces the LEDs' lifespan. Under normal conditions, this lifespan is 40,000 to 50,000 hours. If extending this lifespan is vital, lower the operating temperature by improving the ventilation around the product, thus reducing the ambient temperature. In addition, limiting the overall projection intensity may extend the LEDs' lifespan.



2. INTRODUCTION

Description

The Ovation F-415VW is a variable white Fresnel-style LED lighting fixture with 16-bit dimming resolution for smooth fades. It delivers a beautiful flat, even field of light. Its motorized zoom, with a range between 27° to 68°, is controlled either manually or via DMX. Simple and complex DMX channel profiles offer programming versatility. Virtually silent operation makes it ideal for use in any situation.


Features

- Operating modes:
 - 4 Ch: Dimmer, color temperature, hue, zoom
 - 6 Ch: 16-bit dimmer, color temperature, hue, zoom, strobe
 - 7 Ch: Red, orange, green, royal blue, blue, lime, zoom
 - 9 Ch: Dimmer, red, orange, green, royal blue, blue, lime, strobe, zoom
 - 13 Ch: Dimmer, red, orange, green, royal blue, blue, lime, strobe, color temperature, hue, dimmer speed mode, zoom, motor reset
 - 16 Ch: 16-bit dimmer, 16-bit red, orange, green, royal blue, blue, and lime, strobe, zoom
 - 18 Ch: 16-bit dimmer, 16-bit red, orange, green, royal blue, blue, and lime, strobe, color temperature, hue, zoom
- Variable white LED Fresnel lighting fixture for theatre, film and production
- Soft and even field of light
- Smooth, motorized zoom from 27° to 68°
- Color Temperature Presets from 2800 K to 8000 K with high CRI and CQS
- 28 VDC power input via 3-pin XLR to power the fixture from an external battery pack
- Beautiful 16-bit dimming
- Proprietary LED engine delivers tremendous, equal output at all color temperatures
- Easy to use on board control of color temperature, zoom and dimming
- +/- Green adjustment via DMX or on-board control
- Independent color control over the 6-color engine when a splash of color is needed
- RDM (Remote Device Management) for added flexibility
- Adjustable PWM (Pulse Width Modulation) to avoid flickering on camera
- Virtually silent operation for use in studio and theatre applications






Product Overview

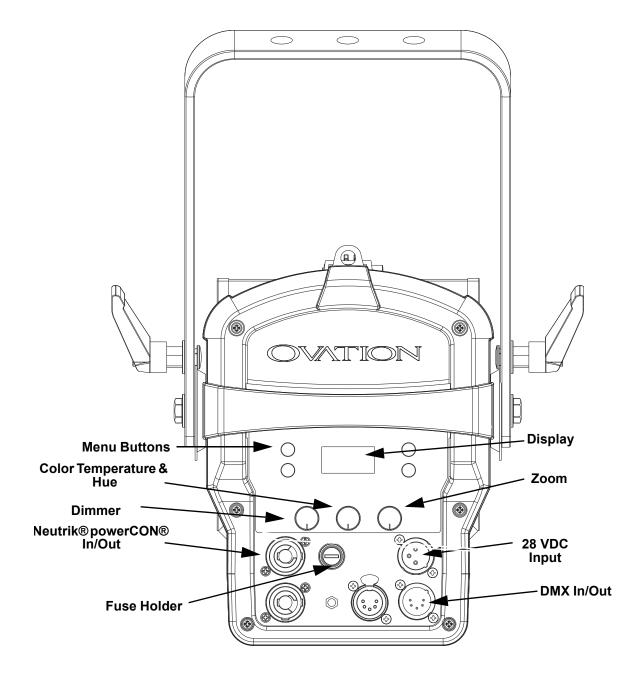





Product Dimensions

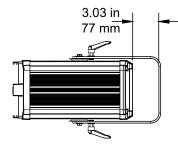








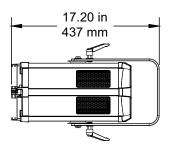

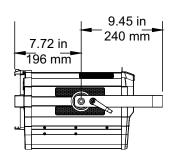

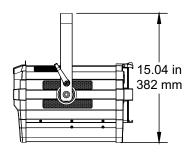

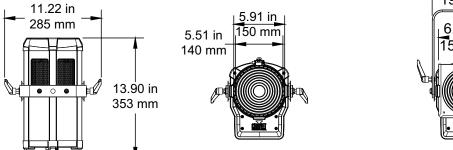

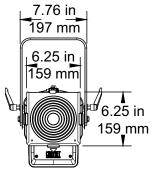



3. Setup

AC/DC Power

This product has an auto-ranging power supply that can work with an input voltage range of 100–240 VAC, 50/60 Hz or 28 VDC power from a conditioned professional regulated battery (for example, Anton Bauer or Block Battery). Never connect both power sources at the same time. To determine the power requirements for each Ovation F-415VW, refer to the label affixed to the product. You can also refer to the Technical Specifications chart in this manual.

The listed current rating indicates the maximum current draw during normal operation. For more information, download Sizing Circuit Breakers from the Chauvet website: <u>www.chauvetprofessional.com</u>...

- Always connect the product to a protected circuit (circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.
- Never connect this product to AC and DC power sources at the same time.
- To eliminate unnecessary wear and improve its lifespan, during periods of nonuse completely disconnect the product from power via breaker or by unplugging it.



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

AC Plug

The Ovation F-415VW comes with a power input cord terminated with a Seetronic Powerkon A connector on one end and an Edison plug on the other end (U.S. market). If the power input cord that came with your product has no plug, or if you need the change the plug, use the table below to wire the new plug.

Connection	Connection Wire (U.S.)		Screw Color	
AC Live	Black	Brown	Yellow or Brass	
AC Neutral	White	Blue	Silver	
AC Ground	Green/Yellow	Green/Yellow	Green	

Power Linking

The product supports power linking. You can power link up to 12 products at 120 V; up to 21 at 208 V; or up to 23 at 230 V. This product comes with a power input cord. Power linking cables are available from Chauvet for purchase.



DMX Linking

You can link the Ovation F-415VW to a DMX controller using a 5-pin DMX connection. If using other DMX-compatible products with this product, you can control each individually with a single DMX controller.

DMX Personalities

The Ovation F-415VW uses a 5-pin DMX data connection for the **4** Ch, **6** Ch, **7** Ch, **9** Ch, **13** Ch, **16** Ch, and **18** Ch DMX personalities.

- Refer to the <u>Introduction</u> chapter for a brief description of each DMX personality.
- Refer to the <u>Operation</u> chapter to learn how to configure the Ovation F-415VW to work in these personalities.
- The <u>DMX Values</u> section provides detailed information regarding the control personalities.

Remote Device Management (RDM)

Remote Device Management, or RDM, is a standard for allowing DMX-enabled devices to communicate bi-directionally along existing DMX cabling. Check the DMX controller's User Manual or with the manufacturer as not all DMX controllers have this capability. The Ovation F-415VW supports RDM protocol that allows feedback to make changes to menu map options.

Master/Slave Connectivity

The Master/Slave mode allows a Ovation F-415VW (the master) to control one or more Ovation F-415VW products (the slaves) without a DMX controller. One Ovation F-415VW becomes the master when running an auto or custom program, or by being in a Static mode.

You must configure each slave's control panel to operate in Slave mode. During Master/Slave operation, the slaves will operate in unison with the master.



DO NOT connect a DMX controller to products operating in Master/Slave mode. The DMX controller signals may interfere with the signals from the master.

- The <u>Operation</u> section of this manual provides detailed instructions on how to configure the master and slaves.
- If you are not familiar with DMX standards or Master/Slave connectivity, download the DMX Primer from the Chauvet website <u>www.chauvetprofessional.com</u> for more information.



Mounting

Before mounting the product, read and follow the safety recommendations indicated in the Safety Notes. For our CHAUVET Professional line of mounting clamps, go to <u>http://trusst.com/products/</u>.

Orientation

Always mount this product in a safe position, making sure there is adequate room for ventilation, configuration, and maintenance.

Rigging


Chauvet recommends using the following general guidelines when mounting this product.

- Before deciding on a location for the product, make sure there is easy access to the product for maintenance and programming purposes.
- Make sure that the structure onto which you are mounting the product can support the product's weight. See the <u>Technical Specifications</u> for weight information.
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- · When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.
- When power linking multiple products, mount the products close enough for power linking cables to reach.
- The bracket adjustment knobs allow for directional adjustment when aiming the product to the desired angle. Only loosen or tighten the bracket knobs manually. Using tools could damage the knobs.

Procedure

The Ovation F-415VW comes with a double-bracketed yoke to which you can either attach mounting clamps for hanging or simply use as a floor stand. You must supply the mounting clamps. Make sure the clamps are capable of supporting the weight of this product. Use at least one mounting point per product. For the CHAUVET Professional line of mounting clamps, go to <u>http://www.trusst.com/products.</u>

Mounting Diagram

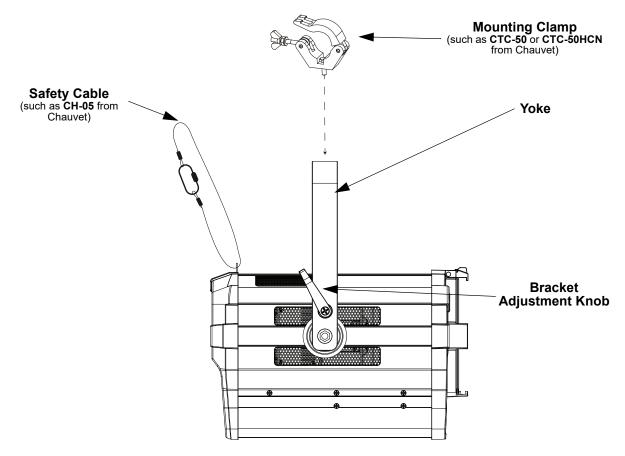



4. Operation Control Panel Operation

Button/Knob	Function
<menu></menu>	Exits from the current menu or function
<enter></enter>	Enables the currently displayed menu or sets the currently selected value in to the current function
<up></up>	Navigates upward through the menu list or increases the numeric value when in a function
<down></down>	Navigates downward through the menu list or decreases the numeric value when in a function
<color Temperature & Hue</color 	Push twice, then turn to select the color temperature. Push again, then turn to set the hue.
<dimmer></dimmer>	Push twice, then turn to increase or decrease the dimmer
<zoom></zoom>	Push twice, then turn to increase or decrease the zoom

Control Options

Set the Ovation F-415VW starting address in the 001–512 DMX range. This enables control of up to 28 products in the 18-channel **18 Ch** personality.

Programming

Refer to the Menu Map to understand the menu options. The menu map shows the main level and a variable number of programming levels for each option.

- To go to the desired main level, press **<MENU>** repeatedly until the option shows on the display. Press **<ENTER>** to select. This will take you to the first programming level for that option.
- To select an option or value within the current programming level, press <UP> or <DOWN> until the option shows on the display. Press <ENTER> to select. In this case, if there is another programming level, you will see that first option, or you will see the selected value.
- Press **<MENU>** repeatedly to exit to the previous main level.

Menu Map

Main Level Programming Levels		Description
DMX Address	001–509*	Selects DMX address (*highest channel restricted to personality chosen)
	4 Ch	4-channel: dimmer, color temperature, hue, zoom
	6 Ch	6-channel: 16-bit dimmer, color temperature, hue, zoom, strobe
	7 Ch	7-channel: red, orange, green, royal blue, blue, lime, zoom
	9 Ch	9-channel: dimmer, red, orange, green, royal blue, blue, lime, strobe, zoom
DMX Personality	13 Ch	13-channel: dimmer, red, orange, green, royal blue, blue, lime, strobe, color temperature, hue, dimmer speed mode, zoom, motor reset
-	16 Ch	16-channel: 16-bit dimmer, 16-bit red, orange, green, royal blue, blue, and lime, strobe, zoom
	18 Ch	18-channel: 16-bit dimmer, 16-bit red, orange, green, royal blue, blue, and lime, strobe, color temperature, hue, zoom



lain Level		Programm	ing Levels		Description
		2800K			
		2900K	-		
		3000K			
		3100K			
		3200K			
		3300K	Dimmer		
		3400K			
		3500K		000 055	
		3600K		000–255	
		3700K			
		3800K			
		3900K			
		4000K			
		4100K			
		4200K			
		4300K			
		4400K	-		Sets the color temperature, dimmer,
	Color	4500K			and hue (green/magenta) levels. Emulates a tungsten lamp at the specified color temperature.
	Temperature	4600K	-		
		4700K			
Static		4800K			
		4900K			
		5000K	Hue		
		5100K		-25–25	
		5200K			
		5300K			
		5400K			
		5500K			
		5600K			
		5700K			
	ł	6000K			
		6500K			
		7000K			
		7500K			
	-	8000K	-		
			ed		Combine red, orange, green, royal
			ange		
	Manual Color		reen		
	Mixer		l Blue	<000–255>	blue, blue, and lime to make a custor color (0–100%)
		-	lue	-	
		Lime		-	
Zoom		0–2		ļ	Controls zoom
Master/		Mas	ster		DMX mode (Master)
Slave		Sla	ve		Slave mode
Dimmer		0	ff		Linear dimmer
Mode	Dimmer 1–3			Dimming curves Dimmer 1 (fast) to Dimmer 3 (slow)	

OPERATION



Main Level	Programming Levels				Description
	Off				Uses factory default white setting
		F	Red		Sets red LED maximum value
White	Manual	Or	ange		Sets orange LED maximum value
Balance			reen	<125–255>	Sets green LED maximum value
		-	al Blue		Sets royal blue LED maximum value
		_	Blue		Sets blue LED maximum value
		_	ime		Sets lime LED maximum value
			0Hz		
	1200Hz				
LED		2000Hz			Sets the PWM frequency
Frequency	uency		4000Hz		
		6000Hz			
	25KHz				
Fan Mode	Auto			Sets the fan to auto mode	
	On			Sets the fan to always on	
	On			Display backlight always on	
	10S			Turns off display backlight after 10 seconds of inactivity	
Back Light	20S			Turns off display backlight after 20 seconds of inactivity	
	30S			Turns off display backlight after 30 seconds of inactivity	
	Fixture I	Hours	<	H>	Shows total hours the product has been powered on
Information	Versi	on	<v_< td=""><td>></td><td>Shows current firmware version</td></v_<>	>	Shows current firmware version
	UID <>			Shows product UID	
Reset	No			Resets the product to factory default	
Factory	Yes			settings	

Configuration (DMX)

Use control configurations to operate the product with a DMX controller.

Control Personalities

This setting allows you to choose a particular control personality.

- 1. Go to the DMX Personality main level.
- 2. Select the desired personality, from 4 Ch, 6 Ch, 7 Ch, 9 Ch, 13 Ch, 16 Ch, or 18 Ch.



- See the <u>Starting Address</u> section for the highest starting address you can select for each personality.
- Make sure that the starting addresses on the various products do not overlap due to the new personality setting.



Starting Address

Each product will respond to a unique starting address from the DMX controller. All products with the same starting address will respond in unison.

- 1. Go to the **DMX Address** main level.
- 2. Select the starting address (**001–512**).

The highest recommended starting address for each DMX mode is as follows:

Personality	Address
18 Ch	495
16 Ch	497
13 Ch	500
9 Ch	504
7 Ch	506
6 Ch	507
4 Ch	509

DMX Values

18 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Red Fine	000 ⇔ 255	0–100%
5	Orange	000 ⇔ 255	0–100%
6	Orange Fine	000 ⇔ 255	0–100%
7	Green	000 ⇔ 255	0–100%
8	Green Fine	000 ⇔ 255	0–100%
9	Royal Blue	000 ⇔ 255	0–100%
10	Royal Blue Fine	000 ⇔ 255	0–100%
11	Blue	000 ⇔ 255	0–100%
12	Blue fine	000 ⇔ 255	0–100%
13	Lime	000 ⇔ 255	0–100%
14	Lime Fine	000 ⇔ 255	0–100%
15	Strobe	000 ⇔ 010	No function
15	Stibbe	011 ⇔ 255	Strobe, slow to fast
16	Color Temperature	000 ⇔ 255	See Preset Color Temperature Chart
17	Hue	000 ⇔ 255	-25–25
18	Zoom	000 ⇔ 255	Narrow to wide

16 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Red Fine	000 ⇔ 255	0–100%
5	Orange	000 ⇔ 255	0–100%
6	Orange Fine	000 ⇔ 255	0–100%
7	Green	000 ⇔ 255	0–100%
8	Green Fine	000 ⇔ 255	0–100%

OPERATION



Channel	Function	Value	Percent/Setting					
9	Royal Blue	000 ⇔ 255	0–100%					
10	Royal Blue Fine	000 ⇔ 255	5 0–100%					
11	Blue	000 ⇔ 255	0–100%					
12	Blue fine	000 ⇔ 255	0–100%					
13	Lime	000 ⇔ 255						
14	Lime Fine	000 ⇔ 255						
15	Strobe		No function Strobe, slow to fast					
16	Zoom	000 ⇔ 255	Narrow to wide					
13 Ch								
Channel	Function	Value	Percent/Setting					
1	Dimmer	000 ⇔ 255						
2	Red	000 ⇔ 255						
3	Orange	000 ⇔ 255	5 0–100%					
4	Green	000 ⇔ 255						
5	Royal Blue	000 ⇔ 255						
6	Blue		5 0–100%					
7	Lime	000 ⇔ 255						
8	Strobe		No function Strobe, slow to fast					
9	Color Temperature		See Preset Color Temper	ature Chart				
10	Hue	000 ⇔ 255	-					
			No function					
		052 ⇔ 101	Dimmer speed mode off					
11	Dimmer Speed Mode	102 ⇔ 152	Dimmer speed mode 1	Hold for 3 seconds: Overrides and				
		153 ⇔ 203	Dimmer speed mode 2	changes menu				
			Dimmer speed mode 3	selection				
12	Zoom	000 ⇔ 255	Narrow to wide					
		000 ⇔ 200	No function					
13	Motor Reset	201 ⇔ 220	Motor reset					
		221 ⇔ 255	No function					

9 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Red	000 ⇔ 255	0–100%
3	Orange	000 ⇔ 255	0–100%
4	Green	000 ⇔ 255	0–100%
5	Royal Blue	000 ⇔ 255	0–100%
6	Blue	000 ⇔ 255	0–100%
7	Lime	000 ⇔ 255	0–100%
8	Strobe	000 ⇔ 010	No function
0		011 ⇔ 255	Strobe, slow to fast
9	Zoom	000 ⇔ 255	Narrow to wide



7 Ch

Channel	Function	Value	Percent/Setting
1	Red	000 ⇔ 255	0–100%
2	Orange	000 ⇔ 255	0–100%
3	Green	000 ⇔ 255	0–100%
4	Royal Blue	000 ⇔ 255	0–100%
5	Blue	000 ⇔ 255	0–100%
6	Lime	000 ⇔ 255	0–100%
7	Zoom	000 ⇔ 255	Narrow to wide

6 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Color Temperature	000 ⇔ 255	See Preset Color Temperature Chart
4	Hue	000 ⇔ 255	-25–25
5	Zoom	000 ⇔ 255	Narrow to wide
6	Strobe	000 ⇔ 010	No function
0	511006	011 ⇔ 255	Strobe, slow to fast

4 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Color Temperature	000 ⇔ 255	See Preset Color Temperature Chart
3	Hue	000 ⇔ 255	-25–25
4	Zoom	000 ⇔ 255	Narrow to wide

Preset Color Temperature Chart

DMX Channel Value	Color Temperature	DMX Channel Value	Color Temperature	DMX Channel Value	Color Temperature
000 ⇔ 005	No function	084 ⇔ 090	3900–4000K	168 ⇔ 174	5100–5200K
006 ⇔ 013	2800–2900K	091 ⇔ 097	4000–4100K	175 ⇔ 181	5200–5300K
014 ⇔ 020	2900–3000K	098 ⇔ 104	4100–4200K	182 ⇔ 188	5300–5400K
021 ⇔ 027	3000–3100K	105 ⇔ 111	4200–4300K	189 ⇔ 195	5400–5500K
028 ⇔ 034	3100–3200K	112 ⇔ 118	4300–4400K	196 ⇔ 202	5500–5600K
035 ⇔ 041	3200–3300K	119 ⇔ 125	4400–4500K	203 ⇔ 209	5600–5700K
042 ⇔ 048	3300–3400K	126 ⇔ 132	4500–4600K	210 ⇔ 216	5700–6000K
049 ⇔ 055	3400–3500K	133 ⇔ 139	4600–4700K	217 ⇔ 223	6000–6500K
056 ⇔ 062	3500–3600K	140 ⇔ 146	4700–4800K	224 ⇔ 230	6500–7000K
063 ⇔ 069	3600–3700K	147 ⇔ 153	4800–4900K	231 ⇔ 237	7000–7500K
070 ⇔ 076	3700–3800K	154 ⇔ 160	4900–5000K	238 ⇔ 244	7500–8000K
077 ⇔ 083	3800–3900K	161 ⇔ 167	5000–5100K	245 ⇔ 255	8000K



Note: The color temperatures above are simulated renditions of the color output produced as compared to a tungsten lamp at the specified color temperature. Chauvet makes no guarantee of the color output accuracy.



Configuration (Standalone)

Use standalone configuration to operate the product without a DMX controller.

Static Mode

The Static mode allows for an unchanging color without a DMX controller.

Color Temperature

- 1. Go to the **Static** main level.
- 2. Select Color Temperature.
- 3. Select the desired color temperature (see Preset Color Temperature Chart).
- 4. Select the desired output level (**<000–255>**).

Manual Color Mixer

- 1. Go to the **Static** main level.
- 2. Select Manual Color Mixer.
- 3. Select the color to edit (Red, Orange, Green, Royal Blue, Blue, or Lime).
- 4. Select the desired output level for that color (<000–255>).
- 5. Repeat steps 3 and 4 until product outputs as desired.

Zoom

The zoom setting allows standalone control of the motorized zoom.

- 1. Go to the **Zoom** main level.
 - 2. Select the desired zoom level (0–255).

Master/Slave

The Master/Slave mode allows a group of Ovation F-415VW products (the slaves) to simultaneously duplicate the output of another Ovation F-415VW (the master) without a DMX controller. To set each of the slaves:

- 1. Go to the Master/Slave main level
 - Go to the Master/Slave main le
 Select Slave.
- Z. Select Slav
 - 1. Go to the **Master/Slave** main level
 - 2. Select Master.
 - 3. Select a static setting.



- The master is the one that runs a program whether in Auto or Static mode.
- Do not connect a DMX controller to the products configured for Master/Slave operation.
- The DMX controller may interfere with signals from the master.
 - The master should be the first product in the daisy chain.

Dimmer Profiles

This setting determines how fast the output of the Ovation F-415VW changes when you modify the output value. This setting provides four different options to simulate the dimming curve of an incandescent lighting product.

- 1. Go to the **Dimmer Mode** main level.
- 2. Select a dimmer curve (**Off**, **Dimmer 1**, **Dimmer 2**, or **Dimmer 3**).



Off: The output is proportional (linear) to the dimmer channel value.

Dimmer 1-3: The output follows the dimmer value based on the corresponding dimmer curve, **Dimmer 1** being the fastest.

White Balance

This setting determines the maximum output values for each color, which affects the appearance of a full output white.

- 1. Go to the White Balance main level.
- 2. Select **Off** (the product will use a default setting) or **Manual**.
- 3. For Manual mode, select the color value to edit (Red, Orange, Green, Royal Blue, Blue, or Lime).
- 4. Set the maximum value for the selected color (**125–255**).
- 5. Repeat steps 3 and 4 until the product outputs as desired.

LED Frequency

This option changes the Pulse Width Modulation (PWM) frequency of the LEDs on the Ovation F-415VW.

- 1. Go to the LED Frequency main level.
- 2. Select PWM Frequency (600Hz, 1200Hz, 2000Hz, 4000Hz, 6000Hz, or 25Khz).



Fan Mode

This setting determines how the fan speed on the Ovation F-415VW is set.

- 1. Go to the **Fan Mode** main level.
- 2. Select **Auto** (fan speed will increase or decrease based on product temperature) or **On** (fan speed will always be at maximum).

Back Light

This setting allows for selection of the amount of time the backlight on the Ovation F-415VW's display stays on after the last button is pressed on the control panel.

- 1. Go to the **Back Light** main level.
- 2. Select On (remains on), 10S (10 seconds), 20S (20 seconds), or 30S (seconds).

System Information

This option displays the total number of hours the product has run, the installed software version, and the product's UID.

- 1. Go to the **Information** main level.
- 2. Select Fixture Hours, Version, or UID.

Factory Reset

This option restores the Ovation F-415VW to factory default settings.

- 1. Go to the **Reset Factory** main level.
- 2. Select No or Yes.



5. TECHNICAL INFORMATION

Product Maintenance

To maintain optimum performance and minimize wear, clean this product frequently. Usage and environment are contributing factors in determining the cleaning frequency.

Clean this product at least twice a month. Dust build-up reduces light output performance and can cause overheating. This can lead to reduced light source life and increased mechanical wear.

To clean the product:

- 1. Unplug the product from power.
- 2. Wait until the product is at room temperature.
- 3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external vents.
- 4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
- 5. Apply the solution directly to a soft, lint free cotton cloth or a lens cleaning tissue.
- 6. Softly drag any dirt or grime to the outside of the transparent surface.
- 7. Gently polish the transparent surfaces until they are free of haze and lint.

Always dry the transparent surfaces carefully after cleaning them.



6. TECHNICAL SPECIFICATIONS

Dimensions and Weight

Dimensions a	nu weigin						
Lengt	Length		Height	Weight			
15.80 in (40	1 mm) 11.	.22 in (285 mm)	9.51 in (242 mm	ı) 12	.79 lb (5.8 kg)		
Note : Dimensions in inches rounded to the nearest hundredth. Power							
Power S	upply Type	Rar	nge	Voltage	Selection		
Switchir	ng (internal)	100 to 240 VA	AC, 50/60 Hz	Auto	-ranging		
Par	ameter	120 V,	60 Hz	230	/, 50 Hz		
Cons	umption	129	W	13	32 W		
Operati	ng Current	1.05	6 A	0.5	568 A		
Power linking	current (products)) 13.6 A (12	products)	13.6 A (2	3 products)		
F	use	Τ2Α,	250 V	T 2 A	, 250 V		
Pov	ver I/O	U.S./C	anada	Worldwide			
DC Power i	nput connector	3-pin	XLR	3-pin XLR			
AC Power i	nput connector	Neutrik® pov	werCON® A	Neutrik® powerCON® A			
Power out	put connector	Neutrik® pov	werCON® B	Neutrik® powerCON® B			
Power	Cord plug	Edison	(U.S.)	Local Plug			
Light Source							
Туре	Color	Quantity	Power	Current	Lifespan		
LED	Red	4	3-4 W	1 A	50,000 hours		
LED	Orange-red	10	3-4 W	1 A	50,000 hours		
LED	Green	4	3-4 W	1 A	50,000 hours		
LED	Blue	6	3-4 W	1 A	50,000 hours		
LED	Royal blue	6	3-4 W	1 A	50,000 hours		
LED	Lime	16	3-4 W	1 A	50,000 hours		
Photometrics							
Par	ameter	Narrow	Zoom	Wide Zoom			
Bea	m Angle	14		43°			
Fiel	d Angle	27	7 °	68°			

939 lux

Illuminance @ 5 m

183 lux

TECHNICAL SPECIFICATIONS



Thermal

Maximum External Temperature	Cooling System	
113 °F (45 °C)	Convection	
DMX		
I/O Connector	Channel Range	
5-pin XLR	4, 6, 7, 9, 13, 16 or 18	
Ordering		
Product Name	Item Code	UPC Number
Ovation F-415VW	03031481	781462218294





Photometrics Chart

Narı	ow	Zoomable Light				t Sou	Source 27°~68°				Wi	de
14° Beam Diameter	27° Field Diameter	Lux								Lux	43° Beam Diameter	68° Field Diameter
0.25 m	0.48 m	23,457								4575	0.79 m	1.35 m
0.49 m	0.96 m	5,869								1,144	1.58 m	2.70 m
1.23 m	2.40 m	939								183	3.94 m	6.75 m
1.96 m	3.84 m	367								71	6.30 m	10.79 m
2.46 m	4.80 m	235								46	7.88 m	13.49 m
3.68 m	7.20 m	104								20	11.82 m	20.24 m
4.91 m	9.60 m	59								11	15.76 m	26.98 m
6.14 m	12.00 m	38								7	19.70 m	33.73 m
7.37 m	14.40 m	26								5		40.47 m
	14° Beam Diameter 0.25 m 0.49 m 1.23 m 1.96 m 2.46 m 3.68 m 4.91 m 6.14 m	Diameter Diameter 0.25 m 0.48 m 0.49 m 0.96 m 1.23 m 2.40 m 1.96 m 3.84 m 2.46 m 4.80 m 3.68 m 7.20 m 4.91 m 9.60 m 6.14 m 12.00 m	Narrow Composite of the stress o	Narrow Composite Composite Composite Lux Lux Lux Composite Lux Composite Composite <thcomposite< th=""> Composite <thcomposite< th=""> Composite <thcomposite< th=""> <thcomposite< th=""> <thcom< td=""><td>Narrow Idea Z7° Field Diameter Lux 0.25 m 0.48 m 23,457 0.49 m 0.96 m 5,869 1.23 m 2.40 m 939 1.96 m 3.84 m 367 2.46 m 4.80 m 23,5 3.68 m 7.20 m 104 4.91 m 9.60 m 59 6.14 m 12.00 m 38</td><td>Narrow Constraints 14° Beam Diameter 27° Field Diameter Lux 0.25 m 0.48 m 23,457 0.49 m 0.96 m 5,869 1.23 m 2.40 m 939 1.96 m 3.84 m 367 2.46 m 4.80 m 235 3.68 m 7.20 m 104 4.91 m 9.60 m 59 6.14 m 12.00 m 38</td><td>Narrow Constraints 14° Beam Diameter 27° Field Diameter Lux 0.25 m 0.48 m 23,457 0.49 m 0.96 m 5,869 1.23 m 2.40 m 939 1.96 m 3.84 m 367 2.46 m 4.80 m 235 3.68 m 7.20 m 104 4.91 m 9.60 m 59 6.14 m 12.00 m 38</td><td>Narrow Constraints 14° Beam Diameter 27° Field Diameter Lux 0.25 m 0.48 m 23,457 0.49 m 0.96 m 5,869 1.23 m 2.40 m 939 1.96 m 3.84 m 367 2.46 m 4.80 m 235 3.68 m 7.20 m 104 4.91 m 9.60 m 59 6.14 m 12.00 m 38</td><td>Narrow Z7° Field Diameter Lux 0.25 m 0.48 m 23,457 0.49 m 0.96 m 5,869 1.23 m 2.40 m 939 1.96 m 3.84 m 367 2.46 m 4.80 m 235 3.68 m 7.20 m 104 4.91 m 9.60 m 59 6.14 m 12.00 m 38</td><td>Narrow Constraints 14° Beam Diameter 27° Field Diameter 0.25 m 0.48 m 23,457 0.49 m 0.96 m 5,869 1.23 m 2.40 m 939 1.96 m 3.84 m 367 2.46 m 4.80 m 235 3.68 m 7.20 m 104 4.91 m 9.60 m 59 6.14 m 12.00 m 38</td><td>14° Beam Diameter27° Field DiameterLux0.25 m0.48 m23,45745750.49 m0.96 m5,8691,1441.23 m2.40 m9391831.96 m3.84 m367712.46 m4.80 m235463.68 m7.20 m104204.91 m9.60 m59116.14 m12.00 m387</td><td>Narrow Constraints With the seam planeter 14° Beam Diameter 27° Field Diameter Lux 43° Beam Diameter 0.25 m 0.48 m 23,457 4575 0.79 m 0.49 m 0.96 m 5,869 1,144 1.58 m 1.23 m 2.40 m 939 183 3.94 m 1.96 m 3.84 m 367 71 6.30 m 2.46 m 4.80 m 235 46 7.88 m 3.68 m 7.20 m 104 20 11.82 m 4.91 m 9.60 m 59 11 15.76 m 6.14 m 12.00 m 38 7 19.70 m</td></thcom<></thcomposite<></thcomposite<></thcomposite<></thcomposite<>	Narrow Idea Z7° Field Diameter Lux 0.25 m 0.48 m 23,457 0.49 m 0.96 m 5,869 1.23 m 2.40 m 939 1.96 m 3.84 m 367 2.46 m 4.80 m 23,5 3.68 m 7.20 m 104 4.91 m 9.60 m 59 6.14 m 12.00 m 38	Narrow Constraints 14° Beam Diameter 27° Field Diameter Lux 0.25 m 0.48 m 23,457 0.49 m 0.96 m 5,869 1.23 m 2.40 m 939 1.96 m 3.84 m 367 2.46 m 4.80 m 235 3.68 m 7.20 m 104 4.91 m 9.60 m 59 6.14 m 12.00 m 38	Narrow Constraints 14° Beam Diameter 27° Field Diameter Lux 0.25 m 0.48 m 23,457 0.49 m 0.96 m 5,869 1.23 m 2.40 m 939 1.96 m 3.84 m 367 2.46 m 4.80 m 235 3.68 m 7.20 m 104 4.91 m 9.60 m 59 6.14 m 12.00 m 38	Narrow Constraints 14° Beam Diameter 27° Field Diameter Lux 0.25 m 0.48 m 23,457 0.49 m 0.96 m 5,869 1.23 m 2.40 m 939 1.96 m 3.84 m 367 2.46 m 4.80 m 235 3.68 m 7.20 m 104 4.91 m 9.60 m 59 6.14 m 12.00 m 38	Narrow Z7° Field Diameter Lux 0.25 m 0.48 m 23,457 0.49 m 0.96 m 5,869 1.23 m 2.40 m 939 1.96 m 3.84 m 367 2.46 m 4.80 m 235 3.68 m 7.20 m 104 4.91 m 9.60 m 59 6.14 m 12.00 m 38	Narrow Constraints 14° Beam Diameter 27° Field Diameter 0.25 m 0.48 m 23,457 0.49 m 0.96 m 5,869 1.23 m 2.40 m 939 1.96 m 3.84 m 367 2.46 m 4.80 m 235 3.68 m 7.20 m 104 4.91 m 9.60 m 59 6.14 m 12.00 m 38	14° Beam Diameter27° Field DiameterLux0.25 m0.48 m23,45745750.49 m0.96 m5,8691,1441.23 m2.40 m9391831.96 m3.84 m367712.46 m4.80 m235463.68 m7.20 m104204.91 m9.60 m59116.14 m12.00 m387	Narrow Constraints With the seam planeter 14° Beam Diameter 27° Field Diameter Lux 43° Beam Diameter 0.25 m 0.48 m 23,457 4575 0.79 m 0.49 m 0.96 m 5,869 1,144 1.58 m 1.23 m 2.40 m 939 183 3.94 m 1.96 m 3.84 m 367 71 6.30 m 2.46 m 4.80 m 235 46 7.88 m 3.68 m 7.20 m 104 20 11.82 m 4.91 m 9.60 m 59 11 15.76 m 6.14 m 12.00 m 38 7 19.70 m

Field B

Beam Field

	Narı	ow	Zoomable Light Source 27°~(27°~6	8°	Wide		
Distance	14° Beam Diameter	27° Field Diameter	Footcandle			Â			Footcandle	43° Beam Diameter	68° Field Diameter	
15 ft	3.68 ft	7.20 ft	104						20	11.82 ft	20.24 ft	
20 ft	4.91 ft	9.60 ft	59						11	15.76 ft	26.98 ft	
30 ft	7.37 ft	14.40 ft	26						5	23.63 ft	40.47 ft	
40 ft	9.82 ft	19.21 ft	15						3	31.51 ft	53.96 ft	
50 ft	12.28 ft	24.01 ft	9						2	39.39 ft	67.45 ft	
75 ft	18.42 ft	36.01 ft	4						1	59.09 ft	101.18 ft	
100 ft	24.56 ft	48.02 ft	2						0	78.78 ft	134.90 ft	
125 ft	30.70 ft	60.02 ft	2						0	98.48 ft	168.63 ft	
150 ft	36.84 ft	72.02 ft	1						0	118.17 ft	202.35 ft	
			F	ield		Ream		Field				
			F	ield		Beam		Field				



RETURNS

Send the product prepaid, in the original box, and with the original packing and accessories. Chauvet will not issue call tags.

Call Chauvet and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause(s) for the return.

Clearly label the package with an RMA number. Chauvet will refuse any product returned without an RMA number.



Write the RMA number on a properly affixed label. DO NOT write the RMA number directly on the box.

Once you have the RMA number, provide the following information on a piece of paper and place it inside the box:

- Your name
- Your address
- Your phone number
- RMA number
- A brief description of the problem

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be your responsibility. FedEx packing or double-boxing are recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).





CONTACT US

General Information	Technical Support
Chauvet World Headquarters	
Address: 5200 NW 108th Ave.	Voice: (844) 393-7575
Sunrise, FL 33351	Fax: (954) 756-8015
Voice: (954) 577-4455	Email: <u>chauvetcs@chauvetlighting.com</u>
Fax: (954) 929-5560	
Toll Free: (800) 762-1084	Website: www.chauvetprofessional.com
Chauvet Europe Ltd	
Address: Unit 1C	Email: UKtech@chauvetlighting.eu
Brookhill Road Industrial Estate	
Pinxton, Nottingham, UK	Website: www.chauvetprofessional.eu
NG16 6NT	
Voice: +44 (0) 1773 511115	
Fax: +44 (0) 1773 511110	
Chauvet Europe BVBA	
Address: Stokstraat 18	Email: BNLtech@chauvetlighting.eu
9770 Kruishoutem	
Belgium	Website: www.chauvetprofessional.eu
Voice: +32 9 388 93 97	
Chauvet France	
Address: 3, Rue Ampère 91380 Chilly-Mazarin	Email: FRtech@chauvetlighting.fr
France	Website: www.chauvetprofessional.eu
Voice: +33 1 78 85 33 59	
Chauvet Germany	
Address: Bruno-Bürgel-Str. 11 28759 Bremen	Email: <u>DEtech@chauvetlighting.de</u>
Germany	Website: www.chauvetprofessional.eu
Voice: +49 421 62 60 20	
Chauvet Mexico	
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2)	Email: <u>servicio@chauvet.com.mx</u>
Zona Industrial Lerma	Website: www.chauvetprofessional.mx
Lerma, Edo. de México, CP 52000	
Voice: +52 (728) 690-2010	

Visit the applicable website above to verify our contact information and instructions to request support. Outside the U.S., United Kingdom, Ireland, Mexico, France, Germany, or Benelux, contact the dealer of record.